



MANTAROBOT™ TELEME
Assembly Instructions &
Quick Start Guide




MantaroBot™
20410 Century Boulevard • Suite 120 • Germantown Maryland 20874
www.MantaroBot.com • info@mantarobot.com
Phone 301 528 2244 • Fax 301 528 1933

Table of Contents

Assembly Instructions.....	3
Quick Start.....	9

Assembly Instructions

1. Carefully unpack the contents in which your TeleMe was shipped. DO NOT throw away the shipping materials. Store them safely so they can be used to ship or transport your TeleMe in the future.
2. Identify the parts in the picture below. The only tool required to assemble your TeleMe is a #1 Phillips screwdriver.

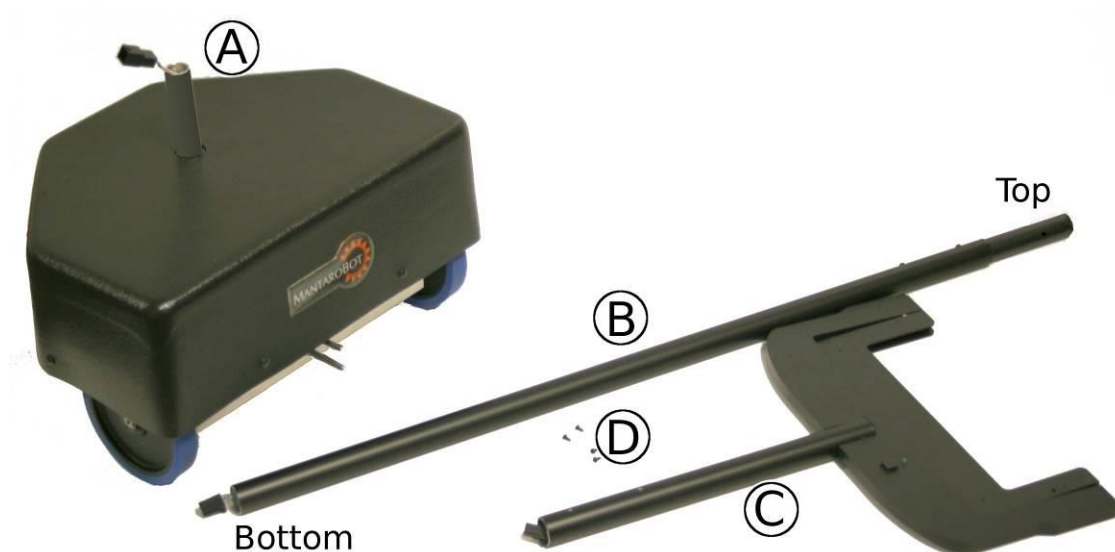

MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com

Phone 301 528 2244 • Fax 301 528 1933

3. Protruding from bottom of mast (B) is a male connector. Protruding from top of base pole (A) is a female connector. Plug male connector from mast (B) into female connector of base (A). See picture below.



4. Slide mast (B) over the base pole (A) while aligning the two screw holes in both (A) and (B). See picture on the right.



MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com

Phone 301 528 2244 • Fax 301 528 1933

5. Using a #1 Phillips screw driver, screw two of the provided screws (D) into the bottom of mast (B) to secure it to base (A). See picture below.



6. Protruding from bottom of device holder (C) is a male connector. Protruding from top of mast (B) is a female connector. Plug male connector from device holder (C) into female connector of mast (B). See picture below.



MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com

Phone 301 528 2244 • Fax 301 528 1933

MANTAROBOT TELEMe

Assembly Instructions & Quick Start Guide



7. Slide pole of device holder (C) over the mast (B) while aligning the two screw holes in both (B) and (C).



8. Using a #1 Phillips screw driver, screw two of the provided screws (D) into the pole of device holder (C) to secure it to mast (B).
9. Install your tablet or smartphone into the device holder (C). If your device holder has the charging connector at the bottom, slide in the tablet as shown below.




MantaroBot™
20410 Century Boulevard • Suite 120 • Germantown Maryland 20874
www.MantaroBot.com • info@mantarobot.com
Phone 301 528 2244 • Fax 301 528 1933

If your device holder has the charging connector on the side, slide in the tablet in the two step process shown below. Then make sure you turn the lock connector on the back. Please refer to the full “MantaroBot TeleMe User Guide and Operating Manual” for additional details on the installation of the device.



Slide tablet all the way down first and then slide towards the charging connector and connect.

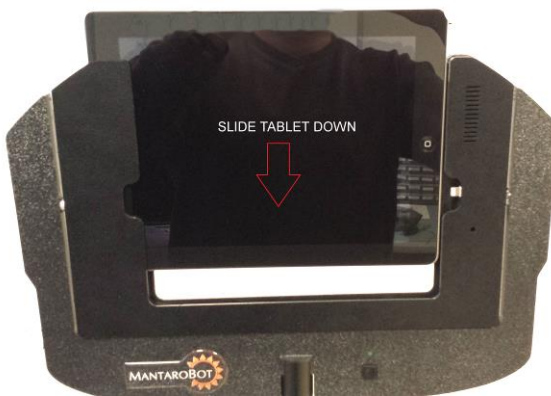

On the backside of the device holder, rotate the lock in the direction of the “L”.

MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com

Phone 301 528 2244 • Fax 301 528 1933

10. If you have also purchased the Charging Docking Station, please refer to the Docking Station User Guide and Operating Manual on the included CD for assembly instructions.

WARNING: When installing your tablet or smartphone to the device holder, PLEASE ensure that it is plugged all the way into the device holder and is fully mated with the docking connector inside the bottom or side of the device holder. Improper installation could result in your device falling out of the holder and breaking!!!

MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com

Phone 301 528 2244 • Fax 301 528 1933

Quick Start

The instructions below are a quick outline for getting your TeleMe up and running. Reading the detailed instructions in the full “MantaroBot TeleMe User Guide and Operating Manual” is highly recommended.

1. Turn ON the battery power switch located on the back of the base of the TeleMe.



2. Turn ON the TeleMe by pressing the Power ON/OFF push button on the front of the device holder. Initially, a single beep will be heard and the LED will turn on and blink. After approximately a minute, a series of ascending tones will be heard indicating that the TeleMe has booted up.



Power ON/OFF
push button

3. To begin configuration of the TeleMe’s WiFi radio that located inside the base of the TeleMe, press the Configuration Mode switch (push-button) located on the back of the base of the TeleMe one time. Alternatively, if the TeleMe has the latest software, quickly double-pressing the Power ON/OFF push button on the head will also place the TeleMe into Configuration Mode.

MantaroBot™
20410 Century Boulevard • Suite 120 • Germantown Maryland 20874
www.MantaroBot.com • info@mantarobot.com
Phone 301 528 2244 • Fax 301 528 1933

After a few moments, there should be an audible series of beep-tones indicating the button was pressed. Wait for the LED on the device holder to blink in a repeating pattern: two blinks and a pause. This will indicate that the TeleMe is ready for configuration.



4. Using a Wifi capable tablet, smartphone, or a computer, browse for available wireless connections in your area. It might be easiest to use the tablet/smartphone installed into the TeleMe device holder. Look for the wireless connection named "MantaroBot-TeleMe_<#>". The <#> at the end of the name will be the digits at the end of the TeleMe device's serial number found on the bottom of the TeleMe or Information Sheet included your shipment. Select this connection. It is open/unsecure and requires no password credentials to connect. This is a wireless access point (network) hosted by the TeleMe itself and will only be used

MantaroBot™

20410 Century Boulevard • Suite 120 • Germantown Maryland 20874

www.MantaroBot.com • info@mantarobot.com


Phone 301 528 2244 • Fax 301 528 1933

MANTAROBOT TELEME

Assembly Instructions & Quick Start Guide




temporarily for configuration.

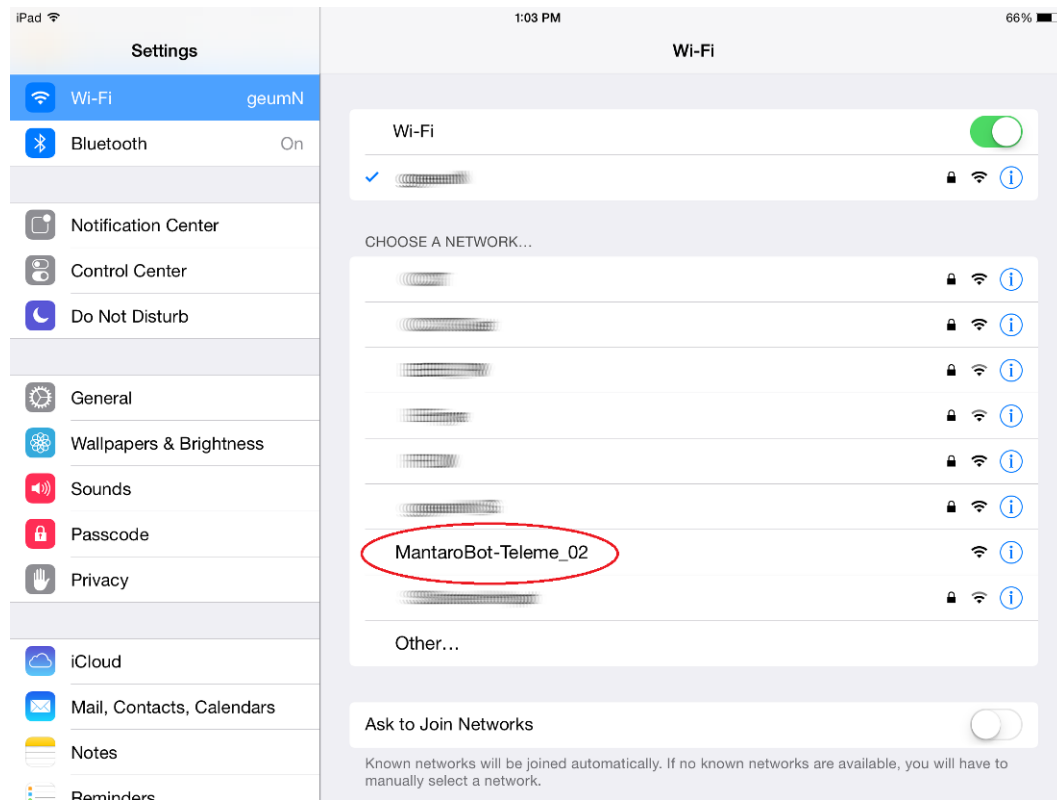

5. Once the Wifi connection is established, open a web browser on the device used above, type <http://192.168.0.1> in the address bar, and hit Enter. The browser will show the MantaroBot

MantaroBot™
20410 Century Boulevard • Suite 120 • Germantown Maryland 20874
www.MantaroBot.com • info@mantarobot.com
Phone 301 528 2244 • Fax 301 528 1933

TeleMe main page webpage as shown below.



MANTAROBOT

MantaroBot TeleMe Main Page

Network Status

Present IP is **192.168.0.1**
Currently in Configuration Mode
Last IP of the robot before placing it into Configuration Mode was
and the WiFi name was

Robot Control Path Status


Status of the robot before it was put into Configuration Mode

Skype	✗ Check log for details
MantaroBot Communication Service Admin Channel	✗ Check MCS setting
MantaroBot Communication Service Main Channel	✗ Check MCS setting
Direct Socket Connection	✓

Main Page [Wifi Connection page](#) [Wifi Profile Editor](#) [User Administration](#) [Advanced Setting](#) [About](#)

Copyright © 2014 MantaroBot™ Corp.






6. Click on the 'Wifi Connection Page' link at the bottom of the webpage and the screen shown below will appear.
7. From the list shown, select the Wifi network that the MantaroBot TeleMe should use for normal operation and click 'Connect'. You may be required to enter an administrator username and password. An initial administrator account was setup prior to the shipment of the TeleMe and can be found on the Information sheet that was shipped with the robot. To connect to a hidden network (e.g. network whose SSID is not broadcasted) click "Connect to hidden wireless network" and enter the requested information. Most networks require a network security key or passphrase. To connect ask your network administrator or Internet service provider (ISP) for the security key or passphrase.
8. If connecting to the selected network was successful, a series of audible beep-tones will be heard and the LED on the device holder will be lit and not flashing. Now, turn the TeleMe power off and back on using the push button on the device holder. Wait for the LED to turn off completely before turning it back on.
9. Your TeleMe is now configured for normal operation. The Wifi connection of the tablet/smartphone can be changed back to the network it is normally configured for.



MantaroBot TeleMe Wireless Network Selection Page

Your Current IP is 192.168.1.104

Current Wifi geumN

	Wifi name	Access Point Mac Address	Signal Strength	Wireless Encryption	Profile Exists
<input checked="" type="radio"/>	geumN	08:00:20:08:00:0E	61% 	WPA2	Yes
<input type="radio"/>	Cell	08:00:20:08:00:0B	82% 	WPA2	No
<input type="radio"/>	My... and Associates	08:00:20:08:00:01	77% 	WPA2	No
<input type="radio"/>	geum	08:00:20:08:00:01	78% 	WPA2	No
<input type="radio"/>	Synthetic	08:00:20:08:00:07	32% 	WPA2	No

[Connect](#)

[Connect to hidden wireless network](#)

[Main Page](#)
[Wifi Profile Editor](#)
[User Administration](#)
[Advanced Setting](#)
[About](#)

Copyright © 2013 Mantaro Product Development Services®